



WASTE WATER PUMPING SYSTEMS

Schedule of works

Upon arrival

Check for fault conditions on control panel

Control panel

Check internal control components

Check lamps

Check sounder

Check stepping relay (if applicable)

Check battery condition (if applicable)

Pump chamber/tank

Check access cover/tank lid

Check pump station chamber/pump tank

Wash down chamber/tank walls (where possible)

Level controls

Check level controls

Check level controls sequence

Pump/s

Check for blockages

Check fluids (oil, coolant)

Check moving parts (rotor, bearings)

Check resistance with electrical meter

Check amp draw with electrical meter

Wash down pump/s

Schedule of works

Pipework and valves

Check internal pipework/fittings

Check valves (non-return and gate valves)

Check valves are clear of debris

Wash down internal pipework

Wash down valves

Final

Wet test system

Check pump/s running in Auto mode

Check control panel closed and switched On/System switched On

Check access cover/tank lid replaced and secured

Excluded

All connecting pipework/fittings to and from the chamber/tank Incoming power supply

Edincare may be unable to inspect all aspects of the equipment due to, for example, inaccessibility of equipment, adverse weather conditions, or where the customer has not followed the installation guidelines. Edincare Terms and Conditions apply.

NOTES



edincarepumps

















